



ITEM#	PARTS DESCRIPTION	ITEM#	PARTS DESCRIPTION	ITEM#	PARTS DESCRIPTION	ITEM#	PARTS DESCRIPTION
1	Drag Knob Assembly	19	Bearing(2req.)	37	Screw	55	Body Cover
2	Spool Assembly	20	Washer	38	Rotor Washer	56	Washer
3	Washer Retaining Clip	21	Line Roller	39	Screw(2req.)	57	Driver Gear
4	Keyed Washer(2req.)	22	Bushing	40	Body Head Cover	58	Oscillation Gear
5	Ear Washer	23	Bail Assembly	41	Screw(3req.)	59	Screw
6	Wool Washer(3req.)	24	Bail Arm Screw(2req.)	42	Pinion Cover	60	Reduction Gear
7	Ball Bearing	25	Bushing(2req.)	43	Bearing(3req.)	61	Screw(4req.)
8	Spool	26	Bail Holder	44	Clutch Spring	62	Oscillation Guide
9	Mainshaft Washer	27	Screw	45	Bearing Holder	63	Clutch Switch
10	Click Gear	28	Bail Holder Cover	46	Clutch Assembly	64	Oscillation Slider
11	Mainshaft	29	Rotor	47	Pinion	65	Screw
12	Rotor Nut	30	Screw	48	Screw	66	Body Rear Cover
13	Screw	31	Balance Block	49	POM Bushing	67	Body
14	Rotor Set Plate	32	Trip Bar	50	Clutch Switch Spring	68	Bearing
15	Rotor Decorate Ring	33	Trip Linkage	51	Handle Assembly	69	Body Side Cover
16	Screw(3req.)	34	Bail Slider	52	Screw	70	Dust Cap
17	Line Roller Screw	35	Spring	53	Screw	71	Bushing
18	Bail Arm	36	Bail Arm Cover	54	Screw(3req.)		